




11.5 FT Round Side Mount Cantilever Umbrella with Base

Assembly, Care & Use Manual

ITM. / ART. 1807167
Model: # UMB-241024

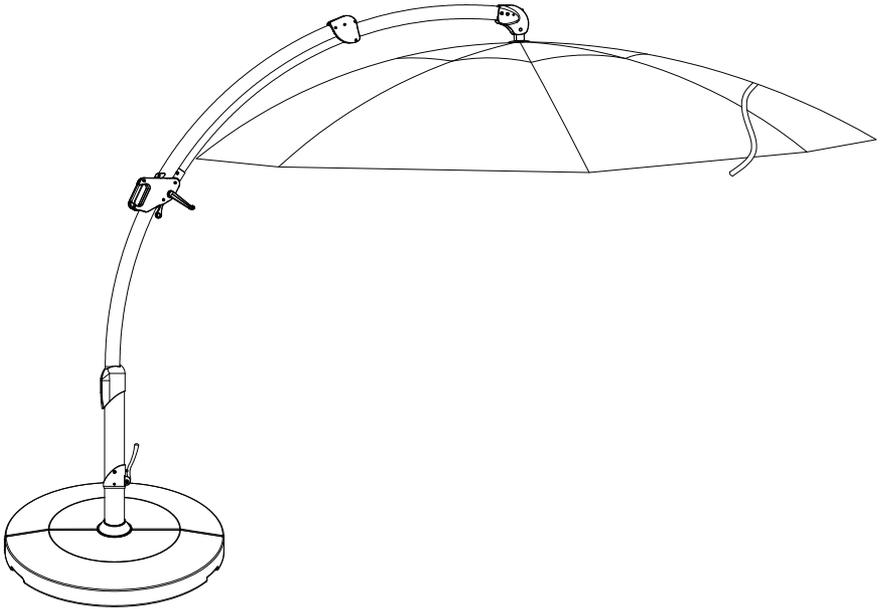

**IMPORTANT, RETAIN FOR FUTURE REFERENCE:
READ CAREFULLY**

For assistance with use, parts, or customer service, please contact:

ATLeisure, LLC

Customer Service is available by email at customerservice@atleisure.com or
chat at <https://help.atleisure.com> 8 AM – 5 PM EST, Monday – Friday.

This item is intended for outdoor domestic use only. Not for commercial use.



Designed in USA

Contents


Preparation	2
Tools Required for Assembly (not included)	3
Hardware and Package Contents	3
Assembly Instructions	4-6
Operation Instructions	6-7
Care and Maintenance	8
Warning and Cautions	9
Warranty	9
Filing a Claim	9
Replacement Parts	10

Preparation

Before beginning product assembly, completely inspect the umbrella and verify all hardware parts are present. Lay out all hardware contents on a clean, flat surface. Compare the parts with package contents list and diagrams below. If there is damage or any missing parts, do not (1) assemble umbrella, (2) fill bases with sand/water, or (3) return to place of purchase. Customer Service is available by email at customerservice@atleisure.com or chat at <https://help.atleisure.com> 8 AM - 5 PM EST, Monday - Friday.

Estimated Assembly Time: 40 minutes


Tools Required for Assembly: Open-end wrench or adjustable wrench (not included)

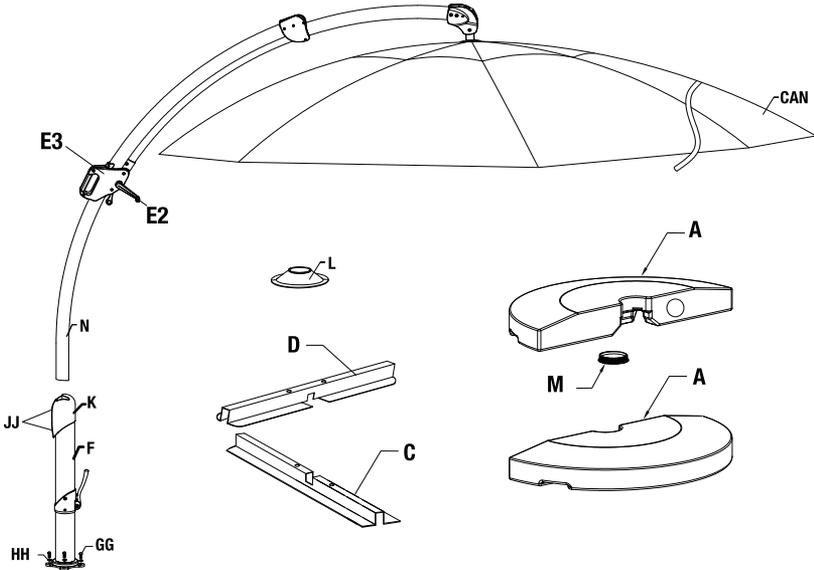

Tools Required for Assembly (not included)

Picture	Description	Quantity
	Adjustable Wrench	1
	Sand Bags (158.8 kg / 350 lbs)	7

Hardware Contents

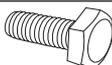Part	Picture	Description	Quantity
GG		Outer Hex Bolt M10-1.5 x 20A2-70	4
HH		Flat Washer M10 A2-70	4
JJ		Inner Hex Bolt M8 A2-70 (Pre-screwed)	2
KK		Inner Hex Wrench M8	1


Package Contents

Part	Description	Quantity
A	Blow Molded Base	2
C	Lower Cross Leg	1
CAN	Canopy (on the umbrella frame)	1
D	Upper Cross Leg	1
F	Holder Pole	1
E2	Canopy Crank Handle	1
E3	Canopy Glide Handle	1
L	Pole Support Cap	1
M	Blow Molded Base Cap	2
N	Umbrella Frame (with canopy)	1


Assembly Instructions



CAUTION: Do not use sharp tools or equipment such as a knife or scissors when removing the protective material; it may damage the product. Be careful not to throw away small parts such as bolts, washers, etc. that may be wrapped in the protective materials.

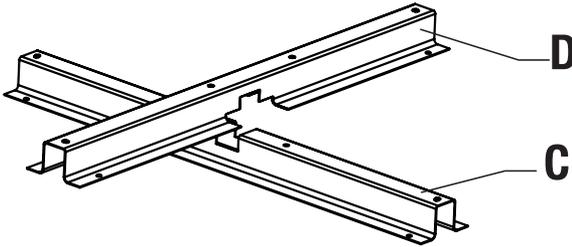

Step 1: Place lower cross leg (C) on ground, line up notches and place upper cross leg (D) over lower cross leg (C).


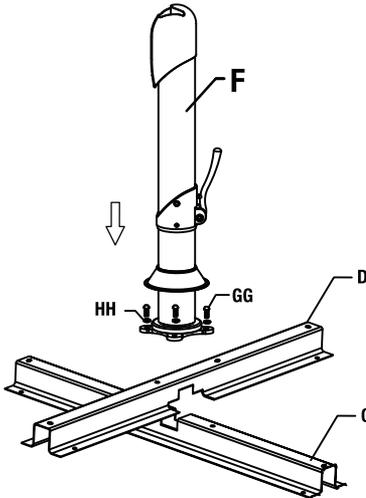


Step 2: Attach Holder Pole (F) to Cross Legs (C, D) by using bolts (GG) and washers (HH). Be careful not to overtighten. Adjust the Holder Pole (F) to be sure it is positioned correctly on base. Finally, tighten bolts with adjustable wrench or open end wrench (not included).

Assembly Instructions (cont.)



WARNING: Before opening umbrella, complete assembly as instructed in manual. Fill each section of base with sand. Add WATER to wet the sand and continue to fill each section with water up to top. Cover hole with cap. Must tighten cap (M) to avoid water leaking from base, which will reduce the base weight, causing the umbrella to tip over. It is recommended at least 158.8 kg (350 lbs) of weight be placed on crossed legs to ensure stability. Failure to do so will result in a weight imbalance and cause umbrella to tip, causing damage and/or personal injury. Each section base is heavy 79.3 kg (175 lbs) after filling. Ensure that at least two adults carry to the desired position.

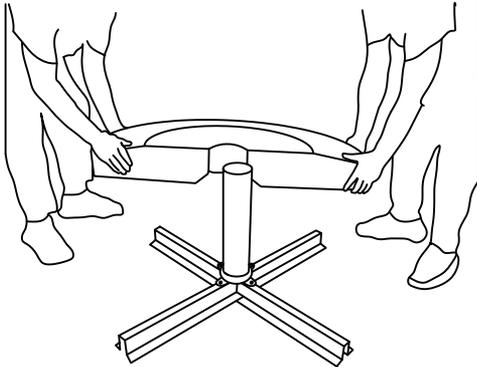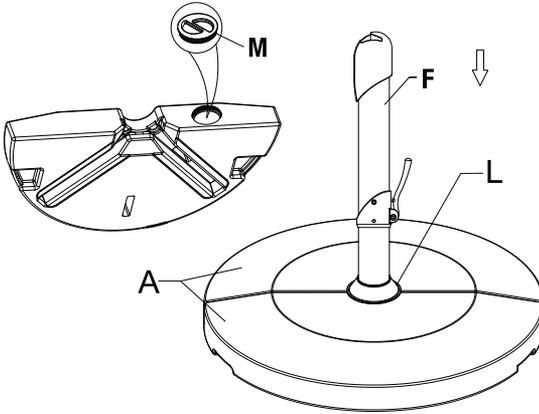

Sand (7 bags)



158.8 kg / 350 lbs


*Bags not included

Step 3: Fill each base with sand, cover with cap (M). Tighten the cap (M) to avoid water leaking which will reduce base weight and can result in the umbrella tipping over.

Assembly Instructions (cont.)




CAUTION: An additional person is suggested to assist with inserting the umbrella frame into the pole holder.

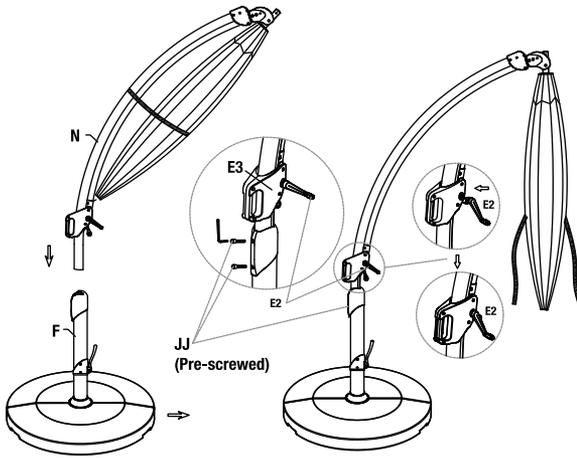

Step 4: Insert Umbrella Frame with canopy (N) into Holder Pole (F). Tighten the two Hex Bolts (JJ) into the holder pole to secure the umbrella using the Hex Wrench (KK). Attached Canopy Crank Handle (E2) into Canopy Glide Handle (E3)


Operation Instructions

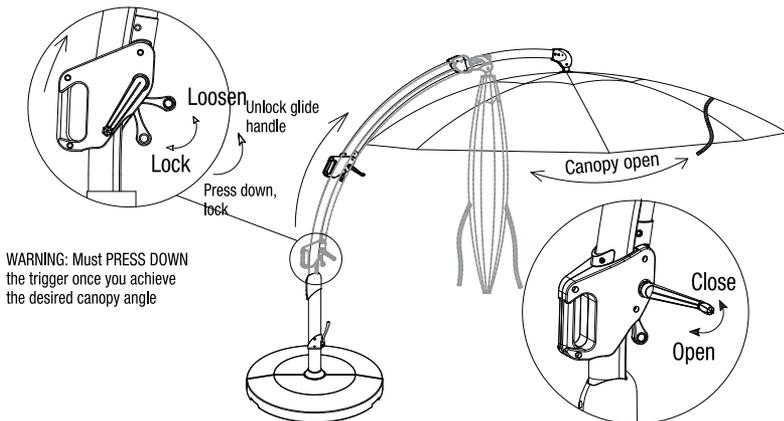


Step 1: Unfasten storage straps around canopy and pole.

Step 2: To open umbrella, squeeze grip on canopy glide handle (E3) and slide up or down on pole to achieve desired canopy angle. Release grip to lock umbrella canopy frame into place. To open canopy, turn canopy crank handle (E2) clockwise until canopy is fully opened.

Operation Instructions (cont.)

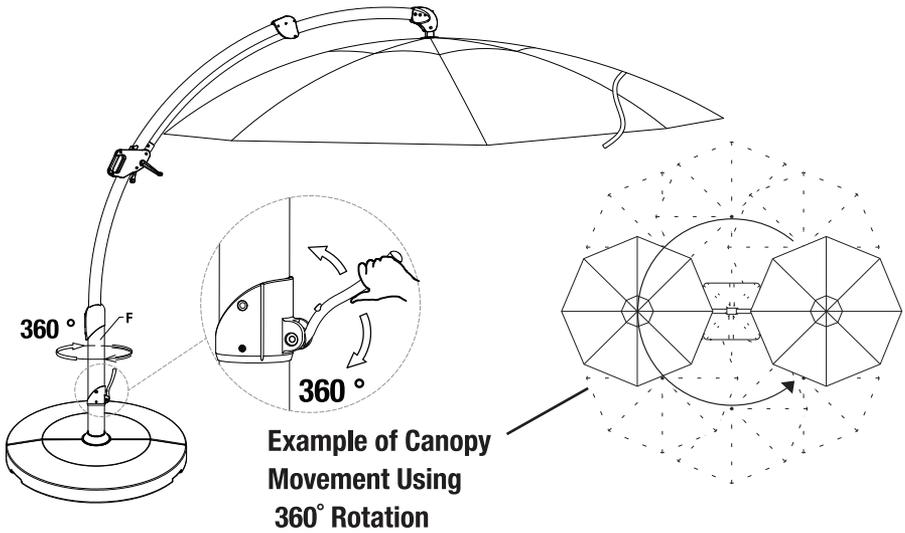

Step 3: The umbrella frame with canopy can be rotated 360°. To rotate umbrella, turn 360° crank handle (E) located on bottom of pole (F) either direction to the desired position.

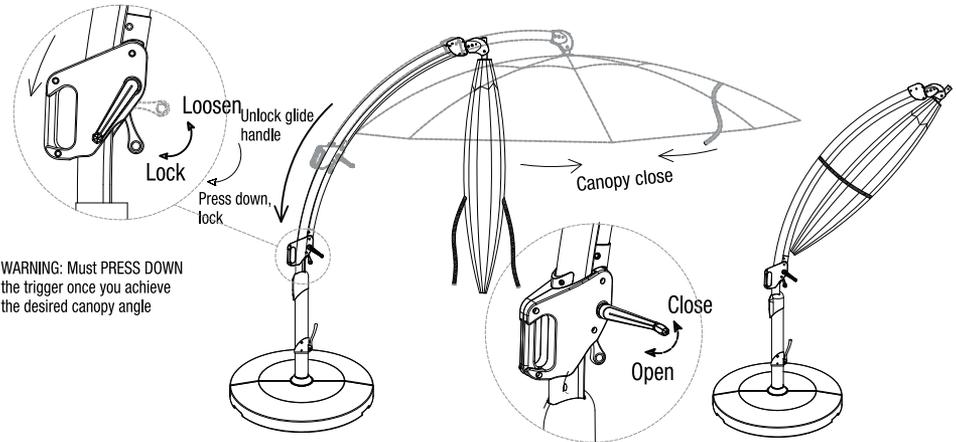

WARNING: Must PRESS DOWN the trigger once you achieve the desired canopy angle

Step 4: To close umbrella, turn canopy crank handle (E2) counter-clockwise until canopy is fully closed. Squeeze grip on canopy glide handle (E3), pull up trigger to unlock, slide down glide handle (E3) to the bottom and press down trigger to lock in position. release grip to lock it in place. Fasten storage straps around canopy and pole.

Care and Maintenance

See enclosed Sunbrella® care and cleaning label sewn into interior seam located on outer edge of the umbrella canopy.

Warning and Cautions



DANGER: Keep children out of the assembly area during assembly.



WARNING: Read all instructions before beginning and follow the steps outlined. Failure to assemble and install as instructed could result in the umbrella tipping over causing personal injury and/or property damage.



WARNING: Do not open umbrella in windy conditions, as it could be blown over and cause personal injury or damage. To secure umbrella properly, either bolt it directly to your deck or patio, or use a properly weighted umbrella base. Keep umbrella away from glass tabletops during windy conditions to prevent breakage. Warranty does not cover damage due to neglect, abuse or poor weather conditions.



CAUTION: Assemble and use umbrella on flat ground.



CAUTION: Place base in the desired location for use before filling. Once the base is full, it will be harder to move. Ensure at least two adults carry the base after filling.



IMPORTANT: Check the tightness of bolts at least every 90 days.



INFORMATION: Be sure to secure and/or weight the base of the umbrella.



INFORMATION: Close the umbrella and use the canopy storage straps when umbrella is not in use.



INFORMATION: Schematics in this manual are for assembly and operation illustration only. They may differ from the umbrella's actual appearance.



INFORMATION: Placement of the umbrella over or near a swimming pool will cause premature fading not covered under our warranty, especially darker colors. Please contact customer service to purchase a replacement canopy.



INFORMATION: It is suggested that the consumer use a cover (not included) to protect umbrella against the elements.

Warranty

This product is covered under a manufacturer's 2-year warranty from date of purchase against defects in materials and workmanship. This warranty does not cover damage due to neglect, abuse or weather related damage. For full warranty disclosure, email us at customerservice@atleisure.com or chat with us at <https://help.atleisure.com>

NOT COVERED UNDER WARRANTY

This warranty excludes the following: acts of nature (i.e. wind, fire, freezing); damage caused by improper assembly, accident, disaster, misuse, abuse, or negligence and discoloration or fading of the finish as a result of exposure to the elements. Product not intended for commercial use. This warranty gives you specific rights, and you may also have other rights which may vary from state to state.

AUSTRALIA: Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be acceptable quality and the failure does not amount to a major failure.

Filing a Claim

If you are within your warranty, you may file a claim by sending your receipt and pictures of your damaged umbrella to ATLeisure at:

Email: customerservice@atleisure.com or chat with us at <https://help.atleisure.com> 8:00 AM to 5:00 PM EST (Monday - Friday)

Replacement Parts

Only individual replacement parts listed below are available while supplies last. For replacement parts, email us at customerservice@atleisure.com or chat with us at <https://help.atleisure.com> 8:00 AM to 5:00 PM EST (Monday - Friday)

Part	Description	Quantity	Re-order No.
A	Blow Molded Base Outside	2	BSE-241024-A
C	Lower Cross Leg	1	LCL-241024-C
CAN	Canopy (Mushroom)	1	CAN-241024
D	Upper Cross Leg	1	UCL-241024-D
F	Holder Pole	1	HDP-241024-F
E2	Canopy Crank Handle	1	CRK-241024-E2
E3	Canopy Glide Handle	1	CRK-241024-E3
L	Pole Support Cap	1	PSC-241024-L
M	Blow Molded Base Cap	4	BCAP-241024
KIT	Hardware Kit (241024)	1	HDW-241024



www.atleisure.com
 ATLANTA, GEORGIA, USA
 Customer Service is available by email at customerservice@atleisure.com or chat at <https://help.atleisure.com> 8 AM – 5 PM EST, Monday – Friday.




11.5 FT
원형 사이드 마운트
캔틸레버 우산
(베이스 포함)

조립, 관리 및 사용 설명서

ITM. / ART. 1807167

품번: # UMB-241024

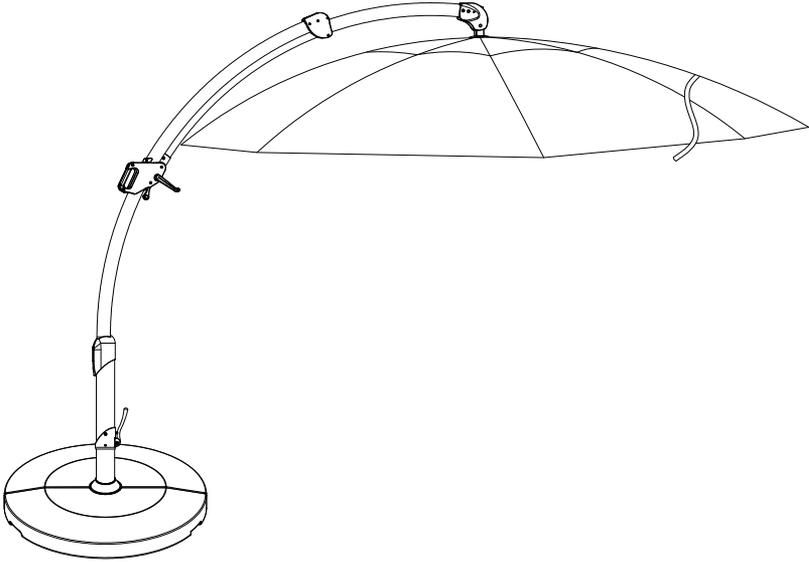

중요: 참조할 수 있도록 반드시 보관하십시오.
내용을 주의 깊게 읽어주십시오.

제품의 사용, 부품 및 고객 서비스 관련 문의처:

ATleisure, LLC

고객 서비스는 이메일 customerservice@atleisure.com 또는 온라인
채팅(<https://help.atleisure.com>)으로 월~금 오전 8:00부터 오후 5:00(미국
동부 표준시 기준)시까지 제공합니다.

본 제품은 실외 및 가정용으로만 사용 가능합니다. 상업용으로 사용할 수 없습니다.



Designed in USA



목차


조립하기 전에	12
조립에 필요한 도구 (미포함)	13
자재 및 패키지 구성	13
조립 방법	14-16
작동 방법	16-17
제품의 유지 및 관리	18
주의 및 경고	19
제품 보증	19
소비자 보상 신청	19
교환 부품	20

조립하기 전에

본 제품의 조립에 앞서, 우산 전체를 꼼꼼히 검사하고 모든 자재 구성품이 있는지 확인하십시오. 모든 자재 구성품을 깨끗하고 반듯한 평면에 놓은 다음, 아래의 패키지 내용을 목록 및 그림과 부품을 비교하세요. 손상되었거나 누락된 부품이 있는 경우 (1) 우산을 조립하거나 (2) 베이스에 모래나 물을 채우지 마시고, (3) 구매처로 반품하십시오. 고객 서비스는 customerservice@atleisure.com을 통한 이메일 접수나 채팅 상담(<https://help.atleisure.com>)을 월~금요일 오전 8시부터 오후 5시까지 이용하실 수 있습니다.

예상 조립 소요 시간: 40분


조립에 필요한 도구: 오픈엔드 렌치 또는 조절 렌치 (미포함)

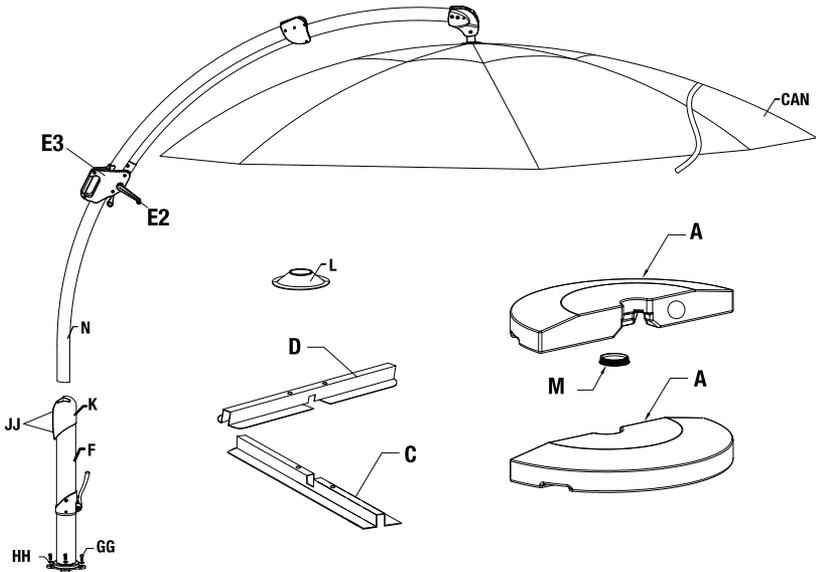

조립에 필요한 도구 (미포함)

그림	설명	수량
	조절식 렌치	1
	모래주머니 (158.8 kg / 350 lbs)	7

자재 구성

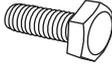부품	그림	설명	수량
GG		바깥쪽 육각 볼트 M10-1.5 x 20A2-70	4
HH		평와셔 M10 A2-70	4
JJ		안쪽 육각 볼트 M8 A2-70 (사전 조임 상태)	2
KK		안쪽 육각 렌치 M8	1


패키지 구성

부품	설명	수량
A	블로우 몰딩 베이스	2
C	하부 크로스 레그	1
CAN	캐노피 (우산 프레임 위)	1
D	상부 크로스 레그	1
F	홀더 폴	1
E2	캐노피 크랭크 핸들	1
E3	캐노피 글라이드 핸들	1
L	폴 지지용 캡	1
M	블로우 몰딩 베이스 캡	2
N	우산 프레임 (캐노피 포함)	1


조립 방법



주의: 보호 필름 제거 시에는 칼이나 가위 등의 날카로운 도구나 장비를 사용하지 마십시오. 제품을 손상시킬 수 있습니다. 보호 필름으로 포장된 볼트, 와셔 등의 작은 부품을 실수로 버리지 않도록 주의해야 합니다.

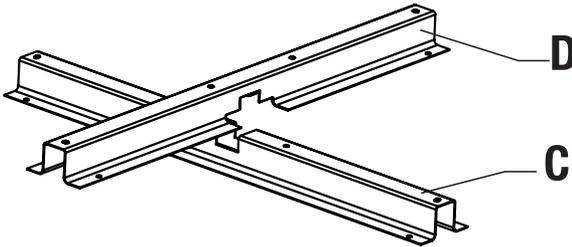

1단계: 하부 크로스 레그(C)를 지면에 놓고 홈을 맞춘 다음, 상부 크로스 레그(D)를 하부 크로스 레그(C) 위에 놓습니다.


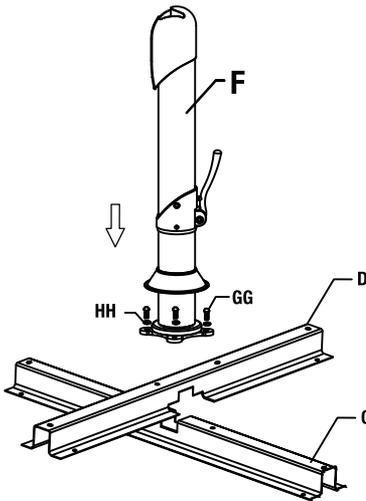


2단계: 볼트(GG)와 와셔(HH)를 써서 홀더 폴(F)을 두 개의 크로스 레그(C, D)에 고정합니다. 너무 꽉 조이지 않도록 주의하십시오. 홀더 폴(F)을 조정하며 베이스 위에 위치가 잘 잡혔는지 확인하십시오. 마지막으로 조절식 렌치나 오픈 엔드 렌치(미포함)를 이용해 볼트를 조입니다.

조립 방법 (계속)



경고: 우산을 펼치기 전에 반드시 설명서에 따라 조립을 먼저 완료하십시오. 베이스의 각 부분에는 모래를 채워야 합니다. 물을 부어 모래를 적시고, 베이스의 구간마다 맨 위까지 최대한 물을 채웁니다. 그런 다음 캡으로 구멍을 막습니다. 베이스에서 물이 새면 무게가 줄어 우산이 넘어질 수 있으니 캡(M)을 견고하게 조여야 합니다. 안정성을 위해 크로스 레그 위에는 최소 158.8kg(350파운드)의 중량을 올려주는 것이 좋습니다. 그렇지 않으면 무게 불균형으로 우산이 넘어져 손상이나 부상을 초래할 수 있습니다. 베이스의 각 부위는 물 주입 후 약 79.3kg(175파운드)의 무게를 지닙니다. 베이스를 옮길 때는 반드시 최소 2명의 성인이 함께 들도록 하십시오.

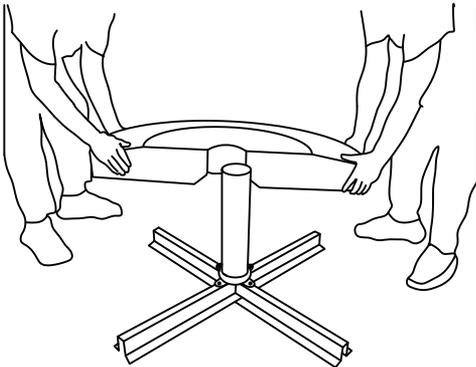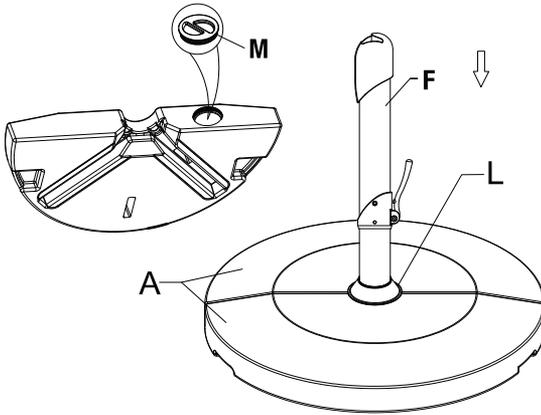

모래 (주머니 7개)



158.8 kg / 350 lbs


*주머니 미포함

3단계: 각 베이스에 모래를 채운 다음 캡(M)을 덮으십시오. 물이 새 경우 베이스 무게가 줄어 우산이 넘어질 수 있으므로 캡(M)을 견고하게 조여 주십시오.

조립 방법 (계속)




주의: 우산 프레임을 홀더 폴에 끼울 때는 추가 인원이 도움을 주는 것이 좋습니다.

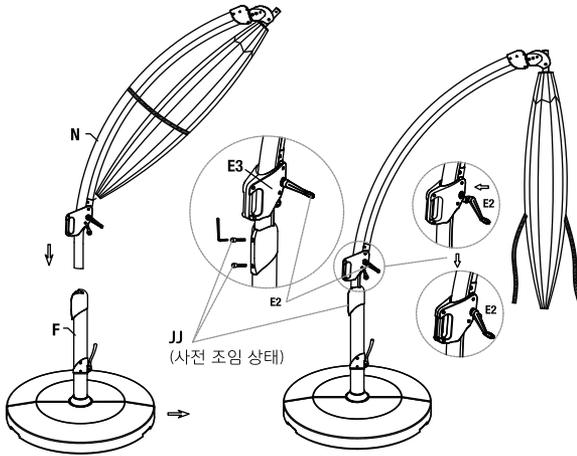

4단계: 캐노피가 부착된 우산 프레임(N)을 홀더 폴(F)에 끼웁니다. 육각 렌치(KK)로 홀더 폴에 육각 볼트(JJ) 2개를 조여 우산을 고정합니다. 그런 다음 캐노피 크랭크 핸들(E2)을 캐노피 glide 핸들(E3)에 연결합니다.


작동 방법

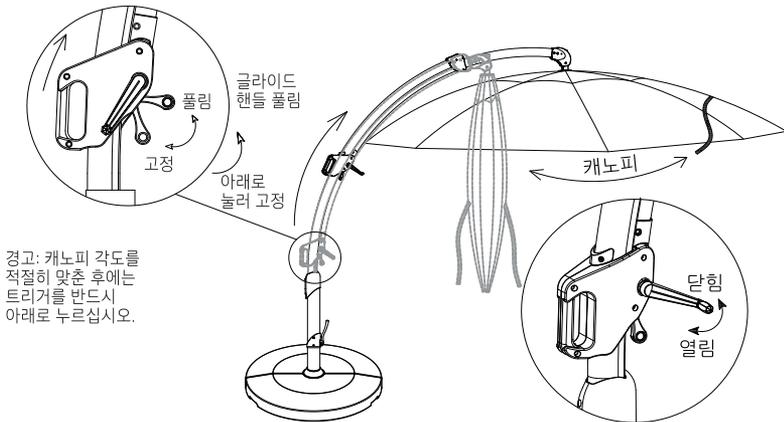

1단계: 캐노피와 폴을 둘러싼 보관용 끈을 풀어줍니다.


2단계: 우산을 펼치려면 캐노피 glide 핸들(E3)을 꼭 잡고 폴의 상하로 밀며 각도를 조정합니다. 손잡이를 놓으면 우산 캐노피 프레임이 제자리에 고정됩니다. 캐노피를 펼칠 때는 캐노피 크랭크 핸들(E2)을 시계 방향으로 끝까지 돌립니다.

작동 방법 (계속)

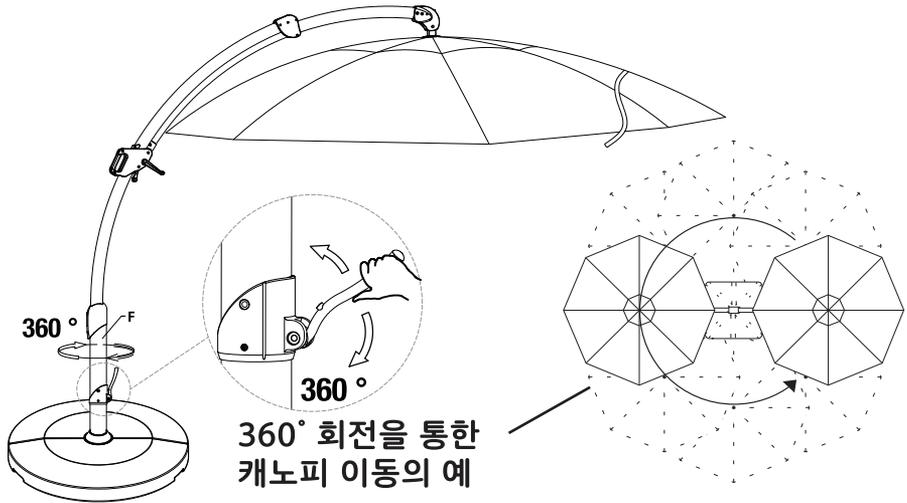

360° 회전을 통한
캐노피 이동의 예

3단계: 캐노피 일체형 우산 프레임은 360° 회전이 가능합니다. 우산을 회전하려면 폴(F) 아래쪽의 크랭크 핸들(E)을 원하는 방향으로 360° 돌리십시오.

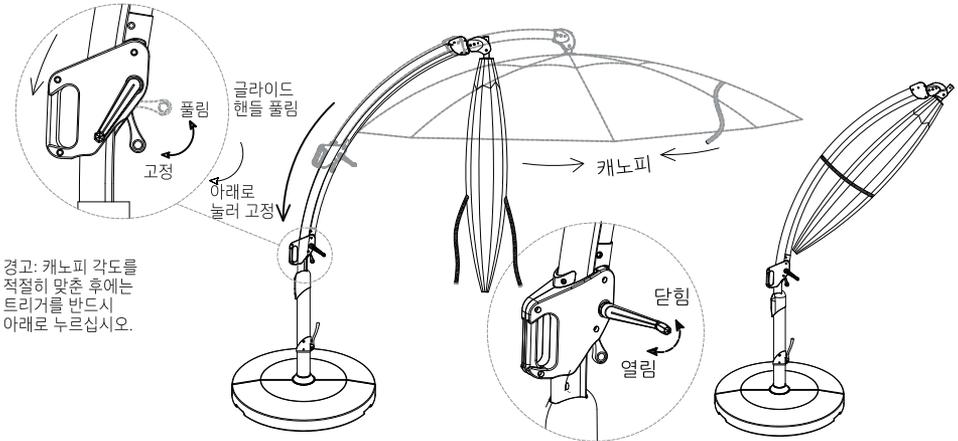

경고: 캐노피 각도를 적절히 맞춘 후에는 트리거를 반드시 아래로 누르십시오.

4단계: 캐노피를 닫을 때는, 캐노피가 완전히 닫힐 때까지 캐노피 크랭크 핸들(E2)을 반시계 방향으로 돌립니다. 캐노피 글라이드 핸들(E3) 손잡이를 꼭 쥐고 트리거를 위로 당겨 잠금을 해제합니다. 그런 다음 핸들(E3)을 아래쪽 끝까지 밀고 트리거를 눌러 제자리에 고정합니다. 이후 손잡이를 놓으면 제자리에 고정되고, 캐노피와 폴을 둘러싼 보관용 끈을 묶어줍니다.

제품의 유지 및 관리

우산 캐노피 바깥쪽 가장자리에 있는 안쪽 솔기에 부착된 Sunbrella® 관리 및 세탁 라벨을 참조하십시오.

Mises en garde



위험: 조립 중에는 어린이가 근처에 다가오지 못하도록 하십시오.



경고: 시작 전에 설명서의 모든 지침을 읽고 단계별 안내를 따르십시오. 지침에 따라 조립 및 설치하지 않으면 우산이 넘어져 신체 손상이나 물적 피해를 초래할 수 있습니다.



경고: 강풍 시에는 우산이 날아가 부상이나 파손의 원인이 될 수 있으므로 절대 우산을 펴지 마십시오. 우산을 올바르게 고정하려면 데크나 파티오에 직접 볼트로 고정하거나, 충분한 무게의 우산 베이스를 사용하십시오. 강풍 시에는 우산으로 인해 유리 테이블이 파손되지 않도록 상판에서 멀리 떨어진 곳에 보관하십시오. 제품에 대한 부주의, 남용, 또는 악천후로 인한 손상은 보증을 적용하지 않습니다.



주의: 우산의 조립은 경사가 없는 평면에서 진행하십시오.



주의: 베이스에 내용물을 채우기 전에, 원하는 위치를 먼저 정하십시오. 내용물을 가득 채우면 위치 변경이 어렵습니다. 내용물을 채운 후에는 2명 이상의 성인이 베이스를 들고 이동하도록 하십시오.



중요: 볼트의 체결 상태는 최소 90일마다 확인하십시오.



정보: 우산 베이스는 반드시 제자리에 고정하거나 중량을 확보하십시오.



정보: 제품을 사용하지 않을 때는 우산을 접고 캐노피 보관용 끈으로 묶어 두십시오.



정보: 본 설명서의 그림은 조립 및 사용 설명을 위한 것으로, 실제 제품의 모습과 다를 수 있습니다.



정보: 우산을 수영장 위나 근처에 두면 보증을 적용할 수 없는 조기 변색이 발생할 수 있으며, 특히 짙은 색상의 우산은 변색에 취약할 수 있습니다. 교체용 캐노피 구매에 대한 사항은 고객 서비스에 문의해 주십시오.



정보: 우산을 각종 기후 요소로부터 보호하려면 덮개(미포함)를 사용하는 것이 좋습니다.

제품 보증

본 제품은 구입일로부터 2년간 자재 및 제조상의 결함에 대해 제조사의 보증이 적용됩니다. 그러나 부주의, 오용, 또는 악천후로 인한 손상은 보증 대상에 속하지 않습니다. 전체 보증 내용을 확인하시려면 customerservice@atleisure.com으로 이메일을 보내시거나, <https://help.atleisure.com>에서 채팅 문의를 부탁드립니다.

EXCLUSION DE GARANTIE

자연현상(바람, 화재, 빙결 등), 부적절한 조립, 사고, 재해, 오용, 남용, 또는 부주의로 인한 손상, 기후 요소 노출로 인한 마감의 변색이나 탈색은 제품 보증의 범위에 포함되지 않습니다. 본 제품은 상업적 용도의 제조물이 아닙니다. 본 보증이 소비자에게 부여하는 권리는 특정적이며, 주마다 상이할 수 있는 다른 권리가 있을 수 있습니다.

호주: 당사의 제품은 호주 소비자법에 따라 제외가 허용되지 않는 보증을 제공합니다. 소비자는 중대한 고장에 대한 교체 또는 환불을 받을 권리가 있으며, 그 외 합리적으로 예측 가능한 손실 및 손상에 대한 보상을 받을 권리가 있습니다. 또한 제품의 품질이 만족스럽지 않고 중대한 고장에 해당하지 않는 경우라도 제품의 수리 및 교환을 받을 권리가 있습니다.

Réclamation

보증 기한이 만료되지 않은 경우, 보상 신청을 위해서는 손상된 우산의 구매 영수증과 사진을 아래 ATLeisure 연락처로 보내주시기 바랍니다:

이메일: customerservice@atleisure.com

채팅: <https://help.atleisure.com> (월~금요일 오전 8시~오후 5시, 미국 동부표준시)

교환용 부품

교환용 부품은 재고 유무에 따라 아래 목록에 있는 개별 부품만 제공이 가능합니다. 부품 교환은 이메일(customer@atleisure.com)로 문의해 주시거나, 채팅 상담(https://help.atleisure.com)을 통해 월~금 오전 8시~오후 5시(미국 동부표준시) 중 문의해 주십시오.

부품	설명	수량	재주문 번호
A	블로우 몰딩 베이스	2	BSE-241024-A
C	하부 크로스 레그	1	LCL-241024-C
CAN	캐노피 (머쉬룸)	1	CAN-241024
D	상부 크로스 레그	1	UCL-241024-D
F	홀더 폴	1	HDP-241024-F
E2	캐노피 크랭크 핸들	1	CRK-241024-E2
E3	캐노피 글라이드 핸들	1	CRK-241024-E3
L	폴 지지용 캡	1	PSC-241024-L
M	블로우 몰딩 베이스 캡	4	BCAP-241024
KIT	자재 키트 (241024)	1	HDW-241024

Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

Costco Wholesale Canada Ltd.*
415 W. Hunt Club Road
Ottawa, Ontario
K2E 1C5, Canada
1-800-463-3783
www.costco.ca
* faisant affaire au Québec sous
le nom les Entrepts Costco

Importador por:
Importadora Primex S.A. de C.V.
Blvd. Magnoentro No. 4
San Fernando La Herradura
Huixquilucan, Estado de México
C.P. 52765
RFC: IPR-300907-S70
(55)-5246-5500
www.costco.com.mx

Costco Wholesale Australia Pty Ltd
17-21 Parramatta Road
Lidcombe NSW 2141
Australia
www.costco.com.au

Costco Wholesale UK Ltd /
Costco Online UK Ltd
Hartspring Lane
Watford, Herts
WD25 8JS
United Kingdom
01923 213113
www.costco.co.uk

Costco Wholesale Spain S.L.U.
Polígono Empresarial Los Gavilanes
C/ Agustín de Betancourt, 17
28906 Getafe (Madrid) España
NIF: B86509460
900 111 155
www.costco.es

Costco Wholesale Iceland ehf.
Kauptún 3-7, 210 Gardabaer
Iceland
www.costco.is

Costco France
1 avenue de Bréhat
91140 Villebon-sur-Yvette
France
01 80 45 01 10
www.costco.fr

Costco Wholesale Japan Ltd.
2 Kakuchi, 2 Gaiku, Kaneda-Nishi
361 Ururika, Kisarazu shi
Chiba, 292-0007 Japan
0570-200-800
www.costco.co.jp

Costco Wholesale Korea, Ltd.
40, Iljil-ro
Gwangmyeong-si
Gyeonggi-do, 14347, Korea
1899-9900
www.costco.co.kr

Costco Wholesale New Zealand Limited
2 Gunton Drive
Westgate
Auckland 0814
New Zealand
www.costco.co.nz

Costco (China) Investment Co., Ltd.
Room 01 Mezzanine
No. 5178, Kang Xin Highway
Pudong New District
Shanghai
China 201315
+86-21-6257-7065

Costco Wholesale Sweden AB
Box 614
114 11 Stockholm
Sweden
www.costco.se

MADE IN CHINA
FABRIQUÉ EN CHINE
HECHO EN CHINA



www.atleisure.com
ATLANTA, GEORGIA, USA
고객 서비스는 이메일(customer@atleisure.com) 또는
채팅(https://help.atleisure.com)으로 월~금 오전 8시~오후
5시(미국 동부표준시) 제공하고 있습니다.